




ELECTRIC RANGE

MODELS:

WEC310S0LB3 (Black)

WEC310S0LW3 (White)


COOKTOP PARTS

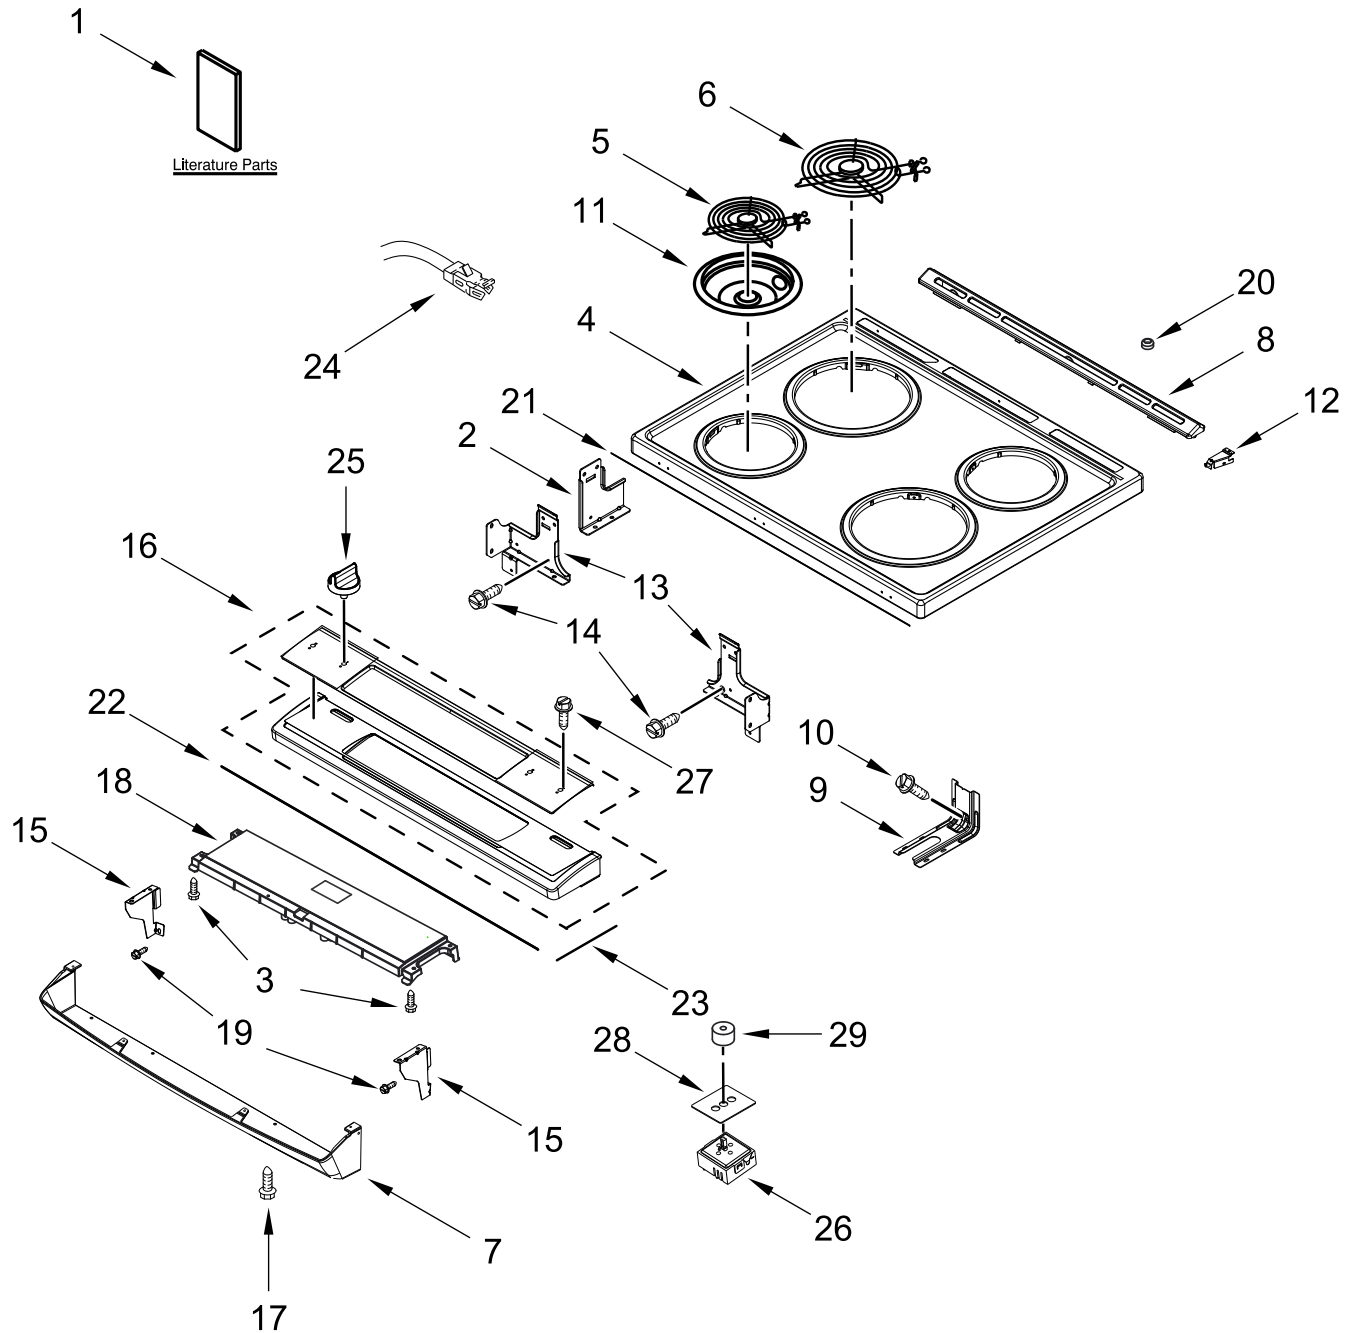

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	11	W10196405	Bowl, Drip (8 in)	24	814399	Receptacle, Element
	W11509605	Owners Manual		W10196406	Bowl, Drip (6 in)	25		Knob
	W11508915	Quick Start Guide					W10905965	Black
	W11508780	Tech Sheet	12	W10162253	Brace, Corner (Left)		W11027257	White
2	W10814305	Bracket, Console (Center)		W10162252	Brace, Corner (Right)	26	W10843843	Switch, Infinite (Left Front and Right Rear)
3	9780274	Screw	13	W10814303	Support, Cooktop (Left)			
4		Cooktop		W10814304	Support, Cooktop (Right)		W10600015	Switch, Infinite (Left Rear and Right Front)
	W10536327	Black						
	W10536268	White	14	3196169	Screw	27	W10674068	Screw
5	W11364018	Element, Coil Heating (1500W)	15	W10547960	Bracket, Console (Left)	28	7201P077-60	Gasket, Infinite Switch
		(Left Front and Right Rear)		W10547961	Bracket, Console (Right)	29	W10702912	Gasket, Switch Stem
6	W11364019	Element, Coil Heating (2400W)	16		Assembly, Console			FOLLOWING PARTS NOT ILLUSTRATED
		(Left Rear and Right Front)		W11512195	Black		W11453734	Harness, Main
				W11512194	White		W11190435	Harness, Cooktop
7		Panel, Front	17	W10516115	Screw		W10800451	Harness, Console
	W10816943	Black	18	W11546962	Electronic, Control (LCX)		313438	Clip, Harness
	W10816942	White					7111P017-60	Clamp, Wire
8		Vent, Trim Top	19	3196178	Screw		W10664316	Clip, Harness (Cooktop)
	W10636528	Black	20	W10854253	Bumper			
	W10636527	White	21	W10612719	Gasket, Console and Cooktop			
9	W11379947	Bracket, Anti-Tip	22	W10689101	Gasket, Console			
10	7101P485-60	Screw, Anti-Tip Kit	23	W10689102	Gasket, Console Short			


CHASSIS PARTS

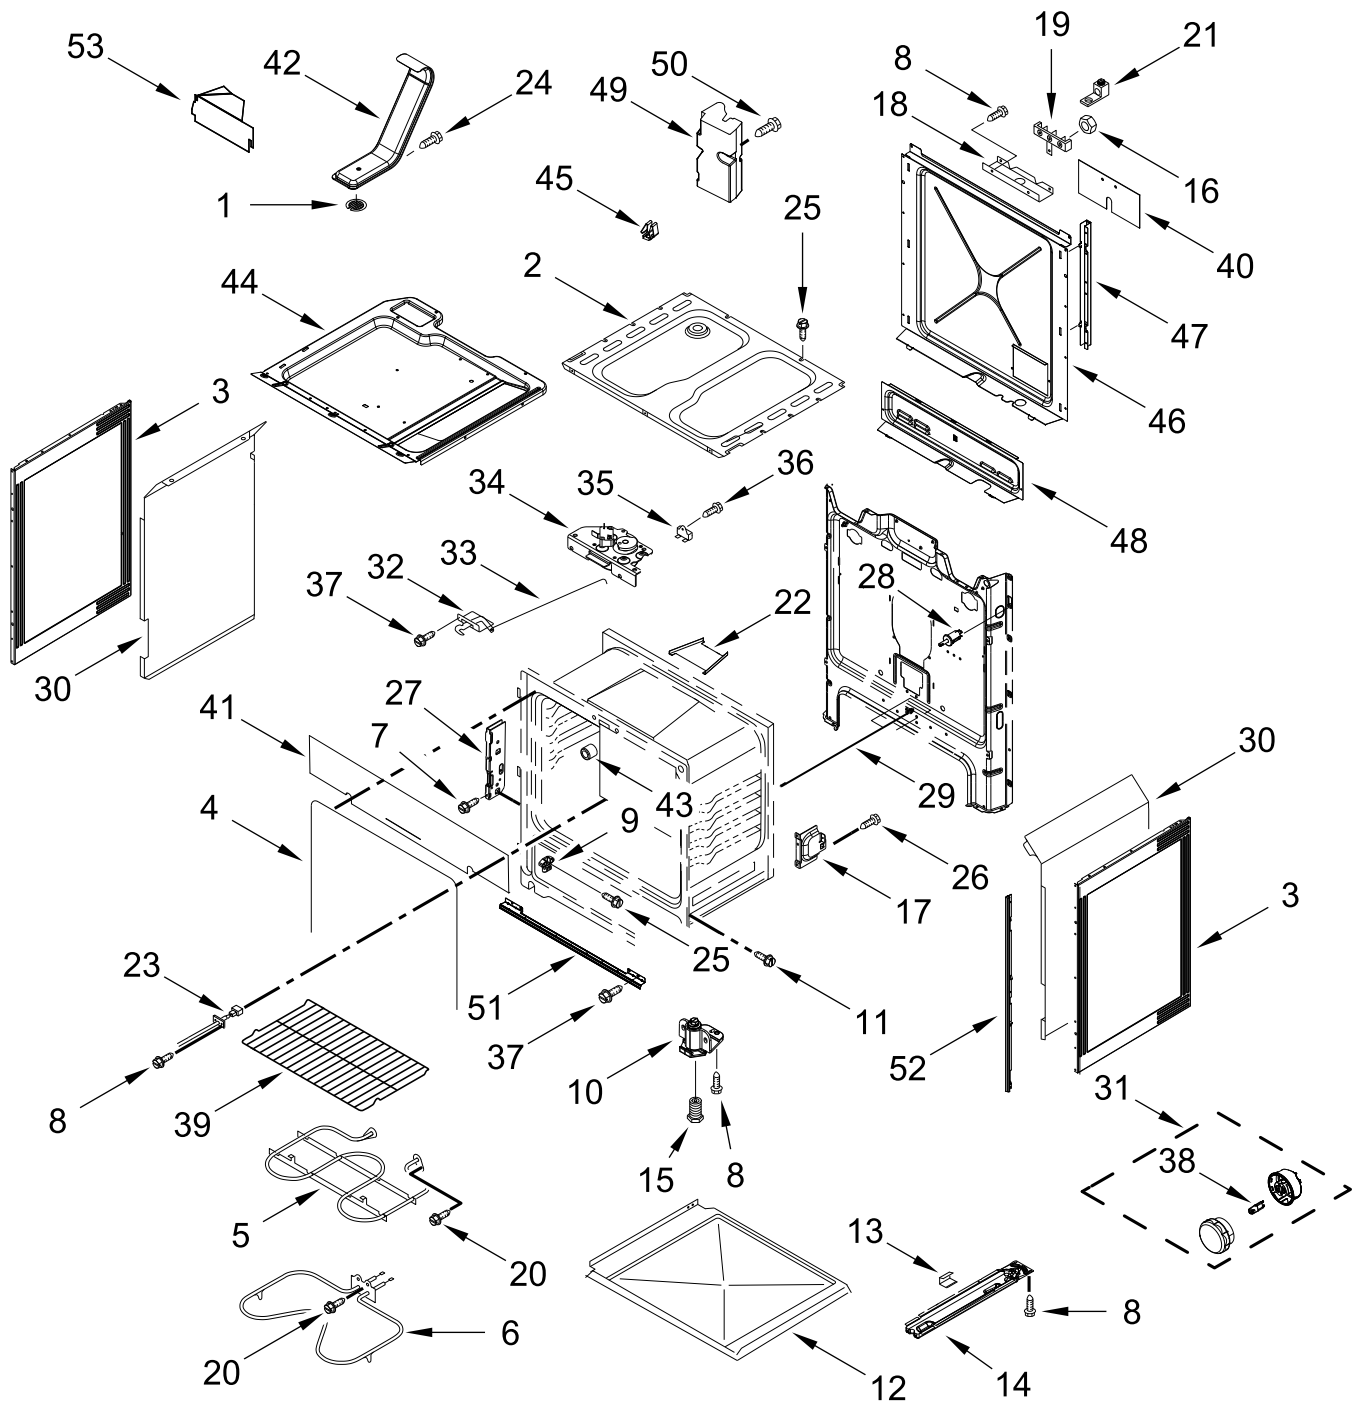

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11092984	Screen, Vent	21	W10281322	Kit, Bare Wire Adapter Block	40	W10655441	Shield, Power Cord
2	W10536273	Burner Box				41	W10848443	Chassis, Upper Insulation
3		Panel, Side	22	W10853400	Baffle, Upper Chassis	42	W11122085	Assembly, Flue
	W10162245	Black	23	W10586204	Sensor	43	9758701	Spacer, Door
	W10575396	White	24	W10362924	Screw	44	W10814301	Chassis, Support Upper
4	W11491751	Seal, Door	25	3400080	Screw	45	W10866583	Clip-Panel, Ratcheting
5	W10583047	Element, Broil	26	3196169	Screw	46	W11379354	Cover, Back
6	W10535148	Bake, Element	27	W10289077	Receiver, Hinge	47	W10162241	Channel, Rear
7	W10031780	Screw	28	W11511828	Switch, Door	48	W10162248	Cover, Wire
8	3196178	Screw	29	9757239	Rod, Door Switch	49	W10914589	Counterweight
9	W10674705	Glide, Drawer Front	30	W11379353	Retainer, Insulation (Left)	50	W11034869	Screw
10	W10341186	Front Foot Assembly		W11379943	Retainer, Insulation (Right)	51	W11464547	Bracket, Front Frame
11	W10067840	Screw	31	W11634772	Light Assembly	52	W11510561	Barrier Rail, Rubber (Front Left)
12	W10312471	Tray, Insulation	32	9761013	Front Door Latch Assembly		W11510562	Barrier Rail, Rubber (Front Right)
13	W10137382	Clip, Panel	33	W10078370	Rod, Push Latch	53	W10818358	Shield, Wire
14	W10390007	Base Rail Assembly (Right)	34	W10107820	Rear Door Latch Assembly			FOLLOWING PARTS NOT ILLUSTRATED
	W10390008	Base Rail Assembly (Left)	35	3196548	Fuse, Thermal		W10830993	Insulation, Wrap
15	W10058460	Foot, Leveling	36	3196172	Screw		W10815385	Insulation, Back
16	3400029	Nut	37	3196560	Screw			
17	W10355173	Bracket, Oven Support	38	W10571723	Bulb, Halogen 40 Watts			
18	3186034	Bracket, Service	39	W11173792	Rack, Oven			
19	W10245259	Block, Terminal						
20	3196154	Screw						


DOOR PARTS

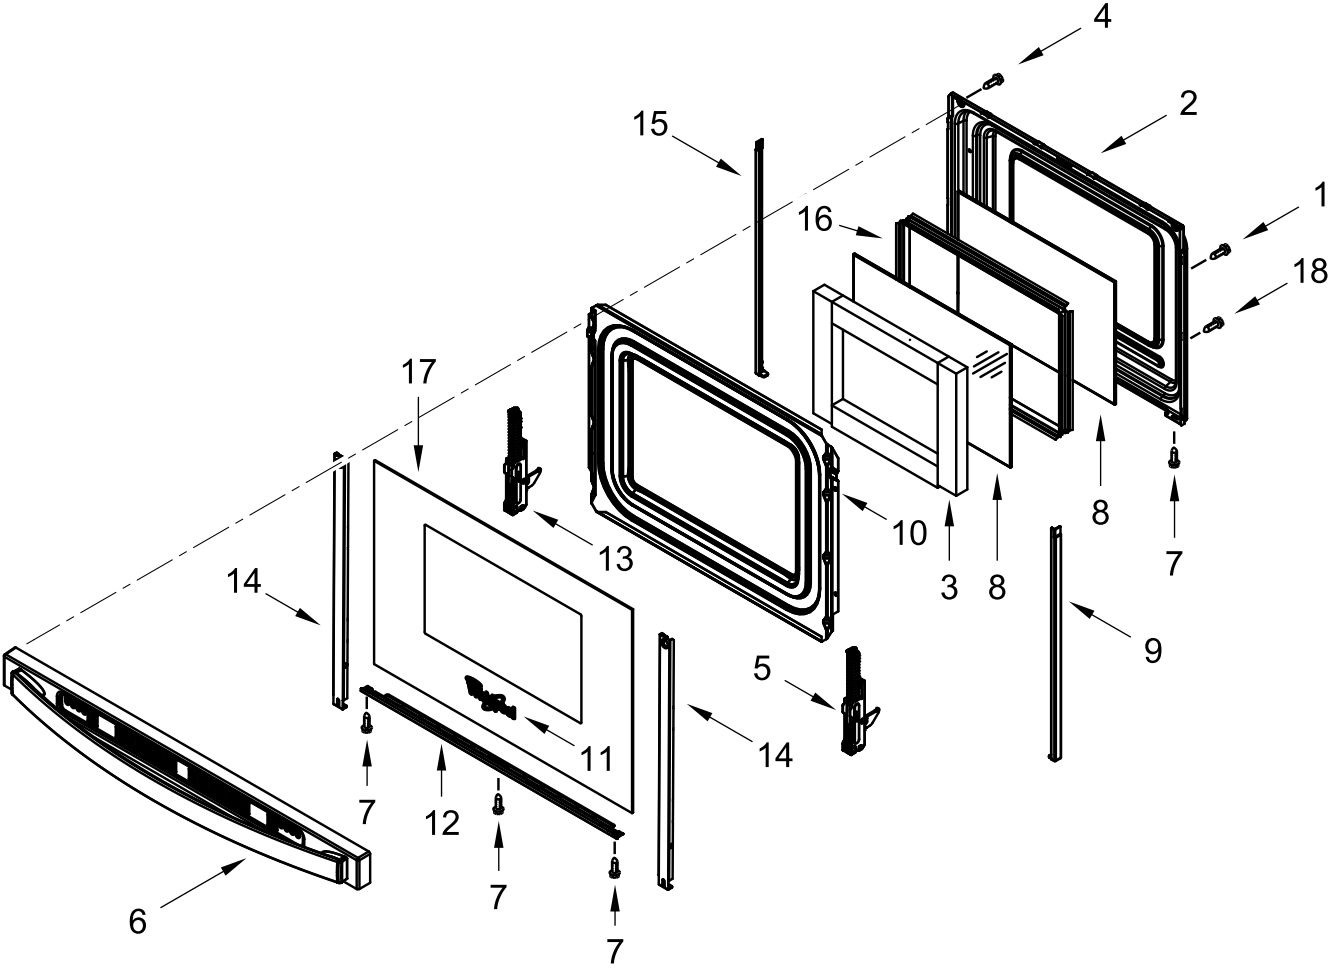

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw	8	9758162	Glass, Inner	14	W11379944	Strap, Door
2	9761344	Liner, Door	9		Trim, Door	15		Trim, Door
3	W10278991	Insulation, Door Strip		W10746435	Black (Right)		W10746436	Black (Left)
4	W10200660	Screw		8523166	White (Right)		8523172	White (Left)
5	W10388635	Hinge, Door (Active)	10	W11380222	Retainer, Insulation	16	W10316950	Frame, Glass
6		Handle and Vent Assembly	11	W10884775	Badge	17		Glass, Outer Door
	W11039085	Black	12		Trim, Lower Door		W11687920	Black
	W11242947	White		W11444043	Black		W10409945	White
7	W10327235	Screw		W11444042	White	18	W10031780	Screw
			13	W10440013	Hinge, Door (Active)			

DRAWER PARTS

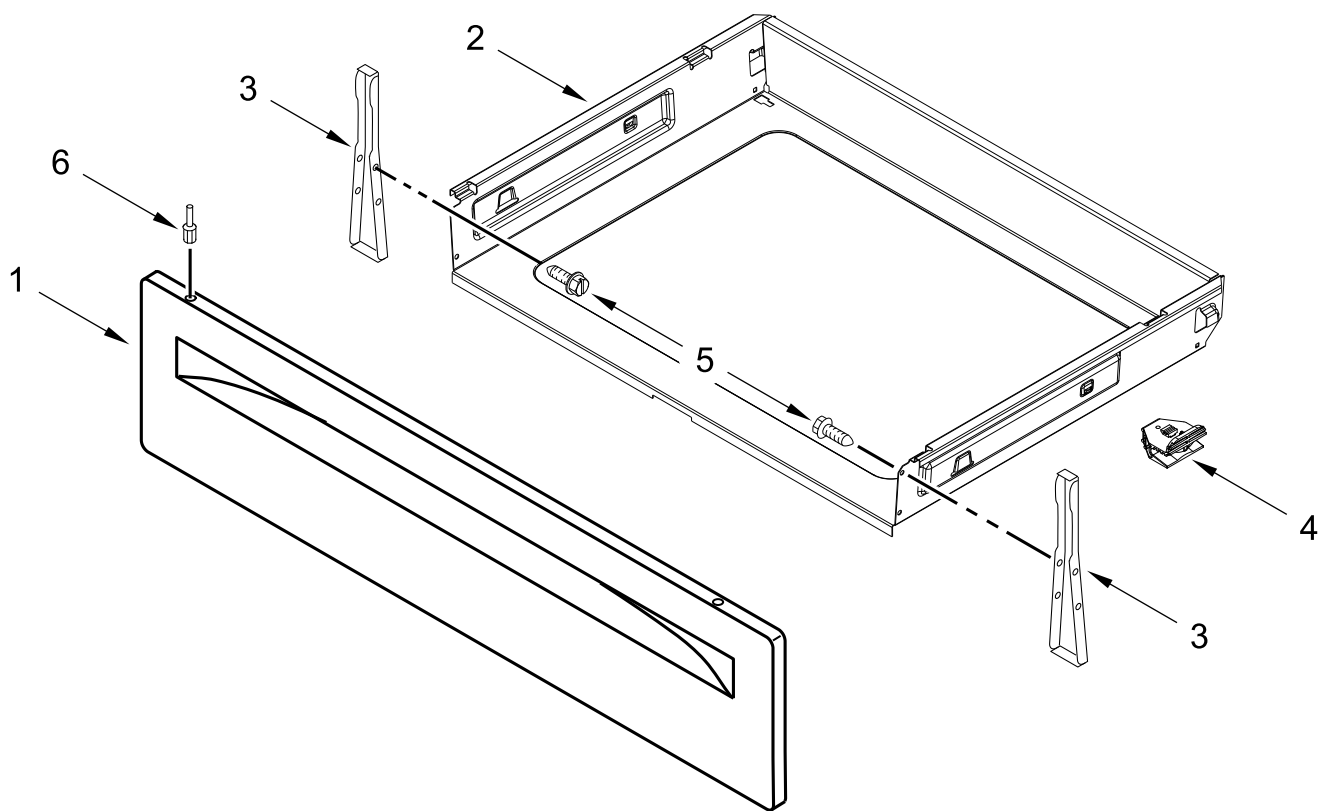

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Front	3	W10462911	Bracket, Mounting	6		Rivet, Push
	W11123976	Black	4	W10674708	Glide, Drawer Rear		3196813	Black
	W11123977	White	5	3196169	Screw		3196814	White
2	W10688022	Drawer, Storage						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting